



Original	Rechange
Open/Close	Eject / Surround
Display	Display / Media
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Title/Return	Back / Return
0	0
Search	Red / Netflix / Search
Menu/Disc	Menu / Home
Up	Up

Original	Rechange
Setup	Setup / OPT /
Left	Left
OK	OK
Right	Right
I<<	I<< / Preset-
Down	Down
>>I	>>I / Preset+
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Angle	Info / Angle
Zoom	Zoom / Size
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
Mute	Mute / Dimmer
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat



