





 

 

 

 

 

 



 

 

 

 

 

 

 





Original	Recharge
 Eject	 Eject / Surround
 Tv Power	 Shift + Power
 Power	 Power
 Stereo/mono	 Shift + Sound / Title
 Name	 AV / Input / RDS
 Dimmer	 Shift + Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Tv/Video	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 Memory	 Shift + D.Menu / Top Menu
 Time	 Sleep / Timer
 Muting	 Mute / Dimmer
 Play Mode	 Play / Slow
 1	 1
 1 TV	 Shift + 1
 2	 2
 2 TV	 Shift + 2

Original	Recharge
 3	 3
 3 TV	 Shift + 3
 Function	 Shift + Setup / OPT / Tools
 Audio	 Audio / Lang I/II
 4	 4
 4 TV	 Shift + 4
 5	 5
 5 TV	 Shift + 5
 6	 6
 6 TV	 Shift + 6
 Band	 Picture / Format
 Angle	 Info / Angle
 7	 7
 7 TV	 Shift + 7
 8	 8
 8 TV	 Shift + 8
 9	 9





Original	Recharge
9 TV	Shift + 9
Sound Field	Sound / Title
Subtitle	Subtitle / EQ
>10	Guide / EPG / -/--
>10 TV	Fav / Marker / PC
0/10	0
0/10 TV	Shift + 0
Enter	Shift + OK
Display	Display / Media
Vol+	Vol+
Vol+ Tv	Shift + Vol+
Vol-	Vol-
Vol- Tv	Shift + Vol-
I<<	I<< / Preset-
I<< TV	Shift + I<< / Preset-
>>I	>>I / Preset+
>>I TV	Shift + >>I / Preset+

Original	Recharge
<<	<< / Tune-
>>	>> / Tune+
Play/Select	Shift + Play /
Pause	Pause / Step / Freeze
Stop	Stop / Hold
DVD Display	Shift + Display / Media
DVD Top Menu	Menu / Home
Up	Up
DVD Menu	D.Menu / Top
Return	Back / Return
Left	Left
OK	OK
Enter TV	Shift + Down
Right	Right
DVD Setup	Setup / OPT /
AMP Menu	Shift + Menu /
Down	Down

