

 



 

 
















 
 

 









Original	Recharge
 Source	 AV / Input / RDS
 Power	 Power
 TrackID	 Sound / Title
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 ?/i-Manual	 TV/Radio /
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Format	 Picture / Format
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Digital/Analog	 Zoom / Size
 Exit	 Exit / Cancel / Clear
 Scene	 Display / Media
 Internet/Video	 Smart / List

Original	Recharge
 Guide	 Guide / EPG / -/--
 Sync Menu	 D.Menu / Top
 Up	 Up
 [i+]/[?]	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Return/Back	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2





Original		Rechange		Original		Rechange	
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	[≡]		Text / Goto				
	0		0				
	[...]		Subtitle / EQ				
	Vol+		Vol+				
	Prog/CH+		CH+ / Page+				
	Mute		Mute / Dimmer				
	Vol-		Vol-				
	Audio		Audio / Lang I/II				
	Prog/CH-		CH- / Page-				

