









 
 

 





 















 
 


 

 



 

 




 
 
 
 
 

 


 



 

 




	Original	Recharge	Original	Recharge
	Power		Power	
	Up			
	Down			
	Right			
	Left			
	OK/Select		Ok	
	M		Menu	
	[i]/Info		Info	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	Exit/-/--		Exit	
	PP		Pre Ch	
	Swap/P<P		Smart	
	CH+		Ch +	
	CH-		Ch -	
	Vol+		Vol +	
	Vol-		Vol -	
	Mute		Mute	
	I-II		Dual	
	Tv/DTV		TV/R	
	AV/Source		AV	
	Red/↑		Red	
	Green/↓		Green	
	Yellow		Yellow	
	Blue		Blue	
	[≡]		Text	



