



 

 


 


 







 








| Original | Rechange |
|---|---|
|  Power |  Power |
|  Rec |  Rec / Rec Mode |
|  Red |  Red / Netflix / Search |
|  I<< |  I<< / Preset- |
|  Green/[] |  Green / APP / Repeat |
|  Stop |  Stop / Hold |
|  Yellow |  Yellow / YouTube / Repeat |
|  Play/[≡] |  Play / Slow |
|  Blue/[■] |  Blue / Prime Video / Random |
|  >>I |  >>I / Preset+ |
|  AV/[?] |  AV / Input / RDS |
|  I-II/[≡≡] |  Audio / Lang I/II |
|  [<>]/[+] |  Picture / Format |
|  [-S-] |  Zoom / Size |
|  Menu |  Menu / Home |
|  [≡] |  Text / Goto |
|  Pause |  Pause / Step / Freeze |

| Original | Rechange |
|---|--|
|  Left |  Left |
|  Up |  Up |
|  Right |  Right |
|  OK |  OK |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Smart ♪ |  Sound / Title |
|  P- |  CH- / Page- |
|  Smart [] |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |





| Original | Recharge | Original | Recharge |
|---------------|---|---|--|
| 0 |  Eject / Surround |  [≡] |  Text / Goto |
| -0- |  Subtitle / EQ |  Left |  Left |
| Power |  Power |  Up |  Up |
| Rec |  Rec / Rec Mode |  Right |  Right |
| I<< |  I<< / Preset- |  OK |  OK |
| Red |  Red / Netflix / Search |  Down |  Down |
| Green/[[]] |  Green / APP / Repeat |  Vol+ |  Vol+ |
| Stop |  Stop / Hold |  Mute |  Mute / Dimmer |
| Play |  Play / Slow |  P+ |  CH+ / Page+ |
| Yellow / List |  Yellow / YouTube / Repeat |  Vol- |  Vol- |
| >>I |  >>I / Preset+ |  Smart J |  Sound / Title |
| AV/[?] |  AV / Input / RDS |  P- |  CH- / Page- |
| I-II/[≡≡] |  Audio / Lang I/II |  Smart [] |  Smart / List |
| [<>]/[+] |  Zoom / Size |  1 |  1 |
| PIP [■] |  Picture / Format |  2 |  2 |
| Menu |  Menu / Home |  3 |  3 |
| Pause |  Pause / Step / Freeze |  4 |  4 |





| Original | | Rechange | | Original | | Rechange | |
|----------|------------|----------|-----------------------|----------|-----------|----------|-------------------|
| | Power | | Power | | Vol- | | Vol- |
| | -O- | | Subtitle / EQ | | Smart J | | Sound / Title |
| | I<< | | I<< / Preset- | | P- | | CH- / Page- |
| | >>I | | >>I / Preset+ | | Smart [] | | Smart / List |
| | AV/[?] | | AV / Input / RDS | | 1 | | 1 |
| | I-II/[≡ ≡] | | Audio / Lang I/II | | 2 | | 2 |
| | [<>]/[+] | | Zoom / Size | | 3 | | 3 |
| | Pause | | Pause / Step / Freeze | | 4 | | 4 |
| | [≡] | | Text / Goto | | 5 | | 5 |
| | Left | | Left | | 6 | | 6 |
| | Up | | Up | | 7 | | 7 |
| | Right | | Right | | 8 | | 8 |
| | OK | | OK | | 9 | | 9 |
| | Down | | Down | | 0 | | 0 |
| | Vol+ | | Vol+ | | P<P | | Fav / Marker / PC |
| | Mute | | Mute / Dimmer | | | | |
| | P+ | | CH+ / Page+ | | | | |

