



| Original | Rechange |
|----------|-------------------|
| Power | Power |
| Mute | Mute / Dimmer |
| PIP- | Shift + CH- / |
| PIP | Zoom / Size |
| PIP+ | Shift + CH+ / |
| Wide | Picture / Format |
| Swap | Smart / List |
| Lang(AD) | Audio / Lang I/II |
| Timers | Sleep / Timer |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |

| Original | Rechange |
|----------|-----------------------------|
| 9 | 9 |
| Text | Text / Goto |
| 0 | 0 |
| AV | AV / Input / RDS |
| i | Info / Angle |
| Vol+ | Vol+ |
| Tv/Radio | TV/Radio / |
| PR+ | CH+ / Page+ |
| Vol- | Vol- |
| FAV | Fav / Marker / PC |
| PR- | CH- / Page- |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| Guide | Guide / EPG / -/-- |
| Up | Up |





| Original | | Recharge | |
|---|----------|---|-----------------------|
|  | Exit |  | Exit / Cancel / Clear |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Back/P<P |  | Back / Return |
|  | Subtitle |  | Subtitle / EQ |
|  | << |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | >> |  | >> / Tune+ |
|  | LIB |  | Setup / OPT / |
|  | Stop |  | Stop / Hold |
|  | Pause |  | Pause / Step / Freeze |
|  | Rec |  | Rec / Rec Mode |
| | | | |
| | | | |

| Original | | Recharge | |
|----------|--|----------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

