




 


 


 

 
 
 







 


 









 




 





 



 

 



 



 



 









 



 





Original		Recharge		Original		Recharge	
	Power		Power		Index / Goto		Shift + Text /
	I<<		I<< / Preset-		Red/Program		Red / Netflix / Search
	Eject		Eject / Surround		Red/Program		TV/Radio /
	<<		<< / Tune-		Green/Slow		Green / APP / Repeat
	>>		>> / Tune+		Green/Slow		Shift + Play /
	>>I		>>I / Preset+		Yellow/Repeat		Yellow / YouTube / Repeat
	Play/Pause		Play / Slow		Yellow/Repeat		Shift + Green / APP /
	TV/TXT /		Text / Goto		Blue/A-B		Blue / Prime Video / Random
	TV/TXT /		Audio / Lang I/II		Blue/A-B		Shift + Yellow / YouTube /
	Cancel / Zoom		Shift + Exit / Cancel / Clear		CH+		CH+ / Page+
	Cancel / Zoom		Shift + Zoom /		TV Menu		Menu / Home
	Reveal / Subtitle		Shift + Subtitle / EQ		Vol+		Vol+
	Stop		Stop / Hold		CH-		CH- / Page-
	Hold / Menu		D.Menu / Top		Source		AV / Input / RDS
	Hold / Menu		Shift + Stop /		Vol-		Vol-
	Size / Angle		Shift + Info / Angle		DTV		Shift + 1
	Subpage / Title		Shift + Sound / Title		DVD Setup		Setup / OPT /





Original		Rechange		Original		Rechange	
	Up		Up		0		0
	Left		Left		Recall		Back / Return
	OK		OK		Picture		Picture / Format
	Right		Right		Sound		Sound / Title
	Down		Down		I/II		Shift + Audio / Lang I/II
	Exit		Exit / Cancel / Clear		Mute		Mute / Dimmer
	Display		Display / Media		Sleep		Sleep / Timer
	1		1		Info		Info / Angle
	2		2		Zoom		Zoom / Size
	3		3		Freeze		Pause / Step / Freeze
	4		4		EPG		Guide / EPG / -/-
	5		5		FAV List		Smart / List
	6		6		FAV ADD		Fav / Marker / PC
	7		7		FAV >>I		Shift + Right
	8		8		Subtitle		Subtitle / EQ
	9		9		Time		Shift + Sleep / Timer
	-/-		Shift + Guide / EPG / -/-		Quick Start		Shift + Smart / List

