



Original	Recharge	Original	Recharge
 Power	 Power	 Yellow	 Yellow
 Play	 Play	 Blue	 Blue
 Stop	 Stop	 CH+	 Ch +
 Pause	 Pause	 CH-	 Ch -
 <<	 <<	 Vol+	 Vol +
 >>	 >>	 Vol-	 Vol -
 I<<	 I<<	 Menu	 Menu
 >>I	 >>I	 Source	 AV
 TV/TXT	 Text	 DVB	 Smart
 Cancel	 Back	 Exit	 Exit
 Reveal	 Eject	 OK	 Ok
 Hold	 Media	 Up	 Up
 Size	 3D	 Down	 Down
 Subpage	 D. Menu	 Right	 Right
 Index	 List	 Left	 Left
 Red	 Red	 1	 1
 Green	 Green	 2	 2





	Original	Recharge		Original	Recharge
	3		3		FAV+
	4		4		FAV-
	5		5		Pic Format
	6		6		Subtitle
	7		7		Text
	8		8		Display
	9		9		Language
	0		0		EPG
	-/--		Shift + Guide		
	Recall		Pre Ch		
	Picture		Shift + Format		
	Sound		Shift + Dual		
	Nicam/A2		Options		
	Mute		Mute		
	Sleep		Sleep		
	Tv/Radio		TV/R		
	FAV		Shift + Pre Ch		

	Original	Recharge		Original	Recharge
	FAV+		Shift + Ch +		
	FAV-		Shift + Ch -		
	Pic Format		Format		
	Subtitle		Subt		
	Text		Shift + Text		
	Display		Info		
	Language		Dual		
	EPG		Guide		

