



| Original      | Recharge                 |
|---------------|--------------------------|
| Power         | Power                    |
| SD/HC         | Shift + Display / Media  |
| Input TV      | Shift + AV / Input / RDS |
| Input AV      | AV / Input / RDS         |
| Aspect        | Picture / Format         |
| Menu          | Menu / Home              |
| N             | Shift + Up               |
| Direct Tv Rec | D.Menu / Top             |
| i             | Info / Angle             |
| Exit          | Exit / Cancel / Clear    |
| Viera Tools   | Smart / List             |
| Viera Link    | Display / Media          |
| Up            | Up                       |
| Guide         | Guide / EPG / -/--       |
| Left          | Left                     |
| OK            | OK                       |
| Right         | Right                    |

| Original   | Recharge                    |
|------------|-----------------------------|
| Option     | Setup / OPT /               |
| Down       | Down                        |
| Return     | Back / Return               |
| Red        | Red / Netflix / Search      |
| Green      | Green / APP / Repeat        |
| Yellow     | Yellow / YouTube / Repeat   |
| Blue       | Blue / Prime Video / Random |
| Text       | Text / Goto                 |
| [≡♦]/Sttl  | Subtitle / EQ               |
| [≡i]/Index | Shift + Info / Angle        |
| [≡+]/Hold  | Shift + Stop /              |
| 1          | 1                           |
| 2          | 2                           |
| 3          | 3                           |
| 4          | 4                           |
| 5          | 5                           |
| 6          | 6                           |



