 



 

 

 
 
 
 
 

 
 
 
 
 

 

 
 
 
 



 








Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right

Original	Rechange
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Yellow	 Yellow
 Blue	 Blue
 Green	 Green
 EPG	 Guide
 Subtitle	 Subt
 TTX	 Text
 Audio	 Dual
 i	 Info
 FAV	 Pre Ch
 Tv/Radio	 TV/R





Original	Rechange
 Video	 Smart
 Scan	 Media
 Device	 Options
 File	 List
 Zoom	 Eject
 Roll	 AV
 Record	 Rec
 Prev.	 I<<
 Next	 >>I
 Play	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>

Original	Rechange

