





 

 

 

 

 

 

 





 







 





Original	Recharge
 Power	 Power
 SD Card	 Display / Media
 Input TV	 TV/Radio /
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 [+] / Aspect	 Picture / Format
 N	 Sound / Title
 Direct Rec TV	 Shift + Rec / Rec Mode
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 D.Menu / Top
 Viera Link	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK
 Right	 Right

Original	Recharge
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 [=◆]/STTL	 Subtitle / EQ
 [=i]/Index	 Eject / Surround
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6



