












 

 







 



 









 




 
 

 

 
 
 

 
 


 


 
 


 

 

 





Original		Rechange		Original		Rechange	
	Power		Power		P-		Ch -
	1		1		[≡..]/Source		AV
	2		2		[≡i]/Menu		Menu
	3		3		(+)		Media
	4		4		[≡?]/Info/[+]		Info
	5		5		Exit		Exit
	6		6		Up		Up
	7		7		Right		Right
	8		8		Down		Down
	9		9		Left		Left
	0		0		Enter		Ok
	[≡+]/-/--		Guide		TTX/MIX		Text
	Recall/Auto/Pre-C		Pre Ch		[≡o]/Dual I-II		Dual
	Mute		Mute		[≡◇]		Format
	Vol+		Vol +		[≡◇]/Sleep		Sleep
	Vol-		Vol -		Red		Red
	P+		Ch +		Green		Green





Original		Rechange		Original		Rechange	
	Yellow		Yellow				
	Blue/P.Mode		Blue				

