


 
 
 

 
 
 

 
 
 
 
 
 
 






 
 





Original		Recharge		Original		Recharge	
	Standby		Power		Cen-		Down
	Reset		Exit		Sur+		>>
	DVD 5.1		Blue		Sur-		<<
	Stereo		Yellow		SW+		>>
	AUX1		Red		SW-		<<
	AUX2		Green		Mute		Mute
	2.1CH		Smart		3D		3D
	5.1CH		Media				
	Master Vol+		Vol +				
	Master Vol-		Vol -				
	Front+		Right				
	Front-		Left				
	Tre+		Ch +				
	Tre-		Ch -				
	Bass+		2				
	Bass-		1				
	Cen+		Up				

