































Original	Rechange
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV/CL	AV / Input / RDS
Zoom	Zoom / Size
[...] / Subtitle	Subtitle / EQ
Audio / Language	Audio / Lang I / II
◀ / Camera	Shift + Info / Angle
?	Setup / OPT /

Original	Rechange
ECO	Display / Media
CEC	Smart / List
Mute	Mute / Dimmer
i	Info / Angle
Z / Back	Back / Return
PR+	CH+ / Page+
Up	Up
Vol-	Vol-
Left	Left
OK	OK
Right	Right
Vol+	Vol+
Down	Down
PR-	CH- / Page-
TVG / Top Menu	Guide / EPG / -/--
TVG / Top Menu	D.Menu / Top
TXT / Menu	Text / Goto

 

























 





 



 

 





 
 
 

 








	Original	Recharge	Original	Recharge
	TXT/Menu	 Menu / Home		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	[<>]	 Shift + Zoom /		
	Rec/ >	 Rec / Rec Mode		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	<	 << / Preset-		
	>	 >> / Preset+		
	<<	 << / Tune-		
	>>	 >> / Tune+		











 

 



















Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I / II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Original	Rechange
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG / Top Menu	 Guide / EPG / -/--
 TVG / Top Menu	 D.Menu / Top
 TXT / Menu	 Menu / Home





	Original	Recharge	Original	Recharge
	TXT/Menu	 Text / Goto		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	[<>]	 Shift + Zoom /		
	Rec/ >	 Rec / Rec Mode		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	I<	 I<< / Preset-		
	>I	 >>I / Preset+		
	<<	 << / Tune-		
	>>	 >> / Tune+		











 

 



















Original	Rechange
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV/CL	AV / Input / RDS
Zoom	Zoom / Size
[...] / Subtitle	Subtitle / EQ
Audio / Language	Audio / Lang I / II
◀ / Camera	Shift + Info / Angle
?	Setup / OPT /

Original	Rechange
ECO	Display / Media
CEC	Smart / List
Mute	Mute / Dimmer
i	Info / Angle
Z / Back	Back / Return
PR+	CH+ / Page+
Up	Up
Vol-	Vol-
Left	Left
OK	OK
Right	Right
Vol+	Vol+
Down	Down
PR-	CH- / Page-
TVG / Top Menu	Guide / EPG / -/--
TVG / Top Menu	D.Menu / Top
TXT / Menu	Text / Goto





	Original	Recharge	Original	Recharge
	TXT/Menu	 Menu / Home		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	[<>]	 Shift + Zoom /		
	Rec/I>	 Rec / Rec Mode		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	I<	 I<< / Preset-		
	>I	 >>I / Preset+		
	<<	 << / Tune-		
	>>	 >> / Tune+		






 


 

 





















Original	Rechange
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV / Input / RDS
	Zoom / Size
	Subtitle / EQ
	Audio / Lang I/II
	+ Shift + Info / Angle
	Setup / OPT /

Original	Rechange
	Display / Media
	Smart / List
	Mute / Dimmer
	Info / Angle
	Back / Return
	CH+ / Page+
	Up
	Vol-
	Left
	OK
	Right
	Vol+
	Down
	CH- / Page-
	Guide / EPG / -/--
	D.Menu / Top
	Text / Goto





	Original	Recharge	Original	Recharge
	TXT/Menu	 Menu / Home		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	[<>]	 Shift + Zoom /		
	Rec/ >	 Rec / Rec Mode		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	I<	 I<< / Preset-		
	>I	 >>I / Preset+		
	<<	 << / Tune-		
	>>	 >> / Tune+		

