 



 







 



 

 



 









 

 









 



 



 

 





 


 





 


 
 




 









Original		Rechange		Original		Rechange	
	RATIO		Picture / Format		VOL+		Vol+
	POWER		Power		MUTE		Mute / Dimmer
	INPUT		AV / Input / RDS		PR+/PAGE UP		CH+ / Page+
	AV MODE		Info / Angle		VOL-		Vol-
	ENERGY		Sleep / Timer		PR-/PAGE		CH- / Page-
	1		1		UP		Up
	2		2		LEFT		Left
	3		3		OK		OK
	4		4		RIGHT		Right
	5		5		MENU		Menu / Home
	6		6		DOWN		Down
	7		7		RETURN		Back / Return
	8		8		RED		Red / Netflix / Search
	9		9		GREEN		Green / APP / Repeat
	LIST		Smart / List		STOP		Stop / Hold
	0		0		YELLOW		Yellow / YouTube / Repeat
	Q.VIEW		Display / Media		PLAY		Play / Slow





Original		Rechange		Original		Rechange	
	BLUE		Blue / Prime Video / Random				
	PAUSE		Pause / Step / Freeze				
	TEXT		Text / Goto				
	<<		<< / Tune-				
	T.OPT		Setup / OPT /				
	>>		>> / Tune+				
	FAV/MARK		Fav / Marker / PC				
	SIMPLINK		Zoom / Size				
	Q.MENU		D.Menu / Top				

