













 







 

 

 

 




 

 





 

 




 
 

 

 



 


 

 







Original		Rechange		Original		Rechange	
	INFO [i+]/REVEAL [?]		Info / Angle		<		Left
	[+]		Zoom / Size		OK		OK
	POWER		Power		>		Right
	<<		<< / Tune-		RETURN		Back / Return
	PLAY		Play / Slow		V		Down
	PAUSE		Pause / Step / Freeze		Tools		Setup / OPT /
	>>		>> / Tune+		Menu		Menu / Home
	SYNC MENU		D.Menu / Top		RED		Red / Netflix / Search
	STOP		Stop / Hold		GREEN		Green / APP / Repeat
	THEATRE		Picture / Format		YELLOW		Yellow / YouTube / Repeat
	DIGITAL		Display / Media		BLUE		Blue / Prime Video / Random
	ANALOG		Smart / List		1		1
	SUBTITLE [...]		Subtitle / EQ		2		2
	AUDIO		Audio / Lang I/II		3		3
	GUIDE		Guide / EPG / -/--		4		4
	^		Up		5		5
	Source		AV / Input / RDS		6		6





Original		Recharge		Original	Recharge
7	7	AUX - HDD 7	7		
8	8	USB 8	8		
9	9	BLUETOOTH 9	9		
TEXT [≡]	TEXT [≡]	GOTO TEXT	Text / Goto		
0	0	HDMI - BAT 0	0		
FAV	FAV	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC		
VOL+	VOL+	+ VOL	Vol+		
CH+	CH+	+ CH PAGE	CH+ / Page+		
VOL-	VOL-	- VOL	Vol-		
CH-	CH-	- CH PAGE	CH- / Page-		
MUTE	MUTE	DIMMER MUTE	Mute / Dimmer		
RECALL	RECALL	PC FAV MARKER	Fav / Marker / PC		

