



 


 


























 


 





 











	Original	Rechange		Original	Rechange
	Power		Power		Pause
	Sleep		Sleep		Stop
	Tuner/Band		Green		I<<
	Auto/Mono		Pre Ch		>>I
	1		1		Shift + Sleep
	2		2		Exit
	3		3		Blue
	4		4		Right
	5		5		Left
	6		6		Ok
	7		7		<<
	8		8		>>
	9		9		Rec
	0		0		Options
	+10		Guide		Dual
	CD		Yellow		Ch +
	Play		Play		Ch -



