



 


 



 




 


 

 
 

 






Original	Rechange
 Power	 Power
 Eject	 Eject / Surround
 Tv/Radio	 TV/Radio /
 Red/Goto	 Red / Netflix / Search
 Green/Angle	 Green / APP / Repeat
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Blue/A-B	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Text	 Text / Goto
 Hold/Freeze	 Shift + Stop /
 D.Menu/Guide	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 Zoom/Size	 Zoom / Size
 Aspect	 Shift + Picture / Format
 Subpage	 Smart / List
 Media	 Shift + Display / Media
 Pause	 Pause / Step / Freeze

Original	Rechange
 Play	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Setup	 Setup / OPT /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I/Index	 >>I / Preset+
 Menu	 Menu / Home
 Up	 Up
 Lang/Audio	 Audio / Lang I/II
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Title/Exit	 Exit / Cancel / Clear





Original	Rechange
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Guide / EPG / -/--
0	0

Original	Rechange
Recall	Back / Return
Source	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title

