



Original		Rechange		Original		Rechange	
	Power		Power		7		7
	Quick OSD		Blue		8		8
	FL Select		List		9		9
	Open/Close		Eject		0		0
	Advanced Disc Review		TV/R		+10		Guide
	AV Enhancer		AV		Cancel		Exit
	Advanced		3D		I<< Skip		I<<
	Sound		Sleep		Skip >>I		>>I
	Picture Mode		Format		<< Slow/Search		<<
	Manual Skip		Smart		Slow/Search >>		>>
	Quick Replay		Media		Stop		Stop
	1		1		Pause		Pause
	2		2		Play		Play
	3		3		Top Menu/Direct Navigator	+	Shift + Menu
	4		4		Menu/Play List		Menu
	5		5		Functions		D. Menu
	6		6		Return		Back





Original	Recharge
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
Subtitle	Subt
Angle/Page	Red
Audio	Dual
Play Mode	Shift + Play
Play Speed	Yellow
Zoom	Shift + Eject
Setup	Options
Group	Green

Original	Recharge

