


 



 
 



















































Original		Rechange		Original		Rechange	
	Power		Power		NICAM		VOD
	Mute		MUTE		Menu		MENU
	1		1		Source		SRC
	2		2		Up		UP
	3		3		Down		DOWN
	4		4		Right		RIGHT
	5		5		Left		LEFT
	6		6		OK		OK
	7		7		Exit		EXIT
	8		8		Display		MEDIA
	9		9		Vol +		VOL +
	0		0		Vol -		VOL -
	-/--		-/-- / EPG		List		INFO
	Back		BACK		Fav List		P/C / FAV
	P.Mode		V-FOR		CH +		CH +
	S.Mode		Audio		CH -		CH -
	Sleep		Shift + Power		TV / Radio		TV/R





Original	Rechange
 CPG	 Shift + VOD
 Aspect	 Shift + V-FOR
 Freeze	 Pause
 Index	 Shift + INFO
 Cancel	 Shift + EXIT
 Subpage	 Subt.
 Text	 TEXT
 Reveal	 OPT+
 Size	 WIDE
 Hold	 Stop
 Mix	 Rec
 Red	 Red (A)
 Green	 Green (B)
 Yellow	 Yellow (C)
 Cyan	 Blue (D)

Original	Rechange

