



 





 




 



















 





 









 





 



 










Original		Rechange		Original		Rechange	
	Power		Power		NICAM		Smart
	Mute		Mute		Menu		Menu
	1		1		Source		AV
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Exit		Exit
	8		8		Display		Info
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	-/--		Guide		List		List
	Back		Back		Fav List		Pre Ch
	P.Mode		Shift + Format		CH +		Ch +
	S.Mode		Dual		CH -		Ch -
	Sleep		Sleep		TV / Radio		TV/R



