

 


 
 
 
 
 
 
 

 



 










 
 

 

 




 



 
 














 


 




 
 




Original	Recharge	Original	Recharge
	Power		Power
	Disc		Media
	Subtitle		Subt
	Angle		TV/R
	Zoom		Eject
	Audio		Dual
	Disc Menu		D. Menu
	Setup		Options
	Return/Title		Back
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<		I<<
	Play		Play
	>>I		>>I
	Pause		Pause
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep





 
 
 

 

 

 

 

 




 


 

Original	Recharge	Original	Recharge
 Repeat	 Text		
 Surr.	 Red		
 Sound	 +  Shift + Dual		
 Vocal	 Yellow		
 Karaoke	 Blue		

Original	Recharge	Original	Recharge






 

 





 
 
 
 
 


 
 
 



Original	Recharge
 Power	 Power
 Tuner	 Media
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2

Original	Recharge
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Program	 Sleep
 Surr.	 Red
 Sound	 Dual






 

 




 

 





 
 
 
 


Original	Recharge
 Power	 Power
 TV	 Media
 Setup	 Options
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Stop	 Stop
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -
 Mute	 Mute
 1	 1

Original	Recharge
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Surr.	 Red
 Sound	 Dual





Original	Recharge
 Power	 Power
 AUX/DI	 Media
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2

Original	Recharge
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Program	 Sleep
 Surr.	 Red
 Sound	 Dual

