



Original	Recharge	Original	Recharge
 Power	 Power	 Right	 Right
 [+]/Aspect	 3D	 Left	 Left
 Input TV	 TV/R	 OK	 Ok
 Input AV	 AV	 Red	 Red
 Menu	 Menu	 Green	 Green
 [≡]/Text	 Text	 Yellow	 Yellow
 [≡♦]/STTL	 Subt	 Blue	 Blue
 APPS	 Media	 Vol+	 Vol +
 i	 Info	 Vol-	 Vol -
 X/Exit	 Exit	 Mute	 Mute
 Option	 Options	 CH+	 Ch +
 Back/Return	 Back	 CH-	 Ch -
 Netflix	 Shift + Smart	 1	 1
 Home	 Smart	 2	 2
 Guide	 Guide	 3	 3
 Up	 Up	 4	 4
 Down	 Down	 5	 5

Original	Recharge	Original	Recharge
 Right	 Right	 Left	 Left
 Left	 Left	 OK	 Ok
 Red	 Red	 Green	 Green
 Green	 Green	 Yellow	 Yellow
 Yellow	 Yellow	 Blue	 Blue
 Blue	 Blue	 Vol+	 Vol +
 Vol+	 Vol +	 Vol-	 Vol -
 Vol-	 Vol -	 Mute	 Mute
 Mute	 Mute	 CH+	 Ch +
 CH+	 Ch +	 CH-	 Ch -
 CH-	 Ch -	 1	 1
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 4	 4
 4	 4	 5	 5





Original		Recharge	
	6		6
	7		7
	8		8
	9		9
	0		0
	?/Help		Dual
	Last View		Pre Ch
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	Stop		Stop
	Rec		Rec
	My APP		Shift + Media

Original	Recharge

