



Original	Recharge
Power	Power
Mute	Mute
Setup/EPG	Options
DVD/AV/DTV	Media
DVD/USB/CARD	AV
OSD/Info	Info
↔/Search	Back
Audio	Dual
Subtitle	Subt
Menu	Menu
Exit/Title	Exit
FAV/Zoom	Pre Ch
CH+	Ch +
CH-	Ch -
VOL+	Vol +
VOL-	Vol -
OK	Ok

Original	Recharge
DVD VOL+	Right
DVD VOL-	Left
Repeat/TV-R	TV/R
Program/Text	Text
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/10	0
10+	Guide
Stop	Stop
Play	Play





	Original	Recharge	Original	Recharge
PLAY/PAUSE	Pause	Pause		
PREV	Prev/Red	Red		
NEXT	Next/Green	Green		
REV	Rev/Yellow	Yellow		
FWD	Fwd/Blue	Blue		

