 







 







 







 






 































 









Original		Rechange		Original		Rechange	
	Power		Power		-/--	 + 	Shift + Guide / EPG / +/-
	Mute		Mute / Dimmer		Jump		Smart / List
	Source		AV / Input / RDS		Menu		Menu / Home
	P.Mode		Picture / Format		Info		Info / Angle
	S.Mode		Sound / Title		Sleep		Sleep / Timer
	I/II/Audio		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	P.Size		Zoom / Size		Up		Up
	1		1		Left		Left
	2		2		Enter		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		Vol+		Vol+
	6		6		Vol-		Vol-
	7		7		P-		CH- / Page-
	8		8		P+		CH+ / Page+
	9		9		Red/D.Setup		Red / Netflix / Search
	0		0		Red/D.Setup		Setup / OPT /



