



Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute
	Netflix		Media		Home		Smart
	Source		AV		P +		Ch +
	1		1		P -		Ch -
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Up		Up
	5		5		Right		Right
	6		6		Down		Down
	7		7		Left		Left
	8		8		OK		Ok
	9		9		Back		Back
	0		0		Exit		Exit
	TV		TV/R		i		Info
	Recall		Pre Ch		Video		Shift + Smart
	V +		Vol +		EPG		Guide
	V -		Vol -		YouTube		Shift + Media





Original	Recharge
Fav 2	Shift + Pre Ch
TXT	Text
Lang.	Dual
Subt.	Subt
Aspect	Format
<<	<<
<<	I<<
Pause	Pause
>>	>>
>>	>>I
Red	Rec
Play	Play
Stop	Stop
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Original	Recharge

