



Original	Recharge	Original	Recharge
Guide	Guide / EPG / -/--	Play	Play / Slow
Power	Power	Pause	Pause / Step / Freeze
Eject	Eject / Surround	<<	<< / Tune-
Tv/Radio	TV/Radio /	>>	>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random	I<<	I<< / Preset-
FAV	Fav / Marker / PC	>>I/Index	>>I / Preset+
Text	Text / Goto	Menu	Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top	Up	Up
Subtitle	Subtitle / EQ	Left	Left
Zoom/Size	Zoom / Size	OK	OK
Aspect	Shift + Picture / Format	Right	Right
Subpage	Info / Angle	Sleep	Sleep / Timer
Media	Shift + Display / Media	Down	Down

Original	Recharge	Original	Recharge
Guide	Guide / EPG / -/--	Play	Play / Slow
Power	Power	Pause	Pause / Step / Freeze
Eject	Eject / Surround	<<	<< / Tune-
Tv/Radio	TV/Radio /	>>	>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random	I<<	I<< / Preset-
FAV	Fav / Marker / PC	>>I/Index	>>I / Preset+
Text	Text / Goto	Menu	Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top	Up	Up
Subtitle	Subtitle / EQ	Left	Left
Zoom/Size	Zoom / Size	OK	OK
Aspect	Shift + Picture / Format	Right	Right
Subpage	Info / Angle	Sleep	Sleep / Timer
Media	Shift + Display / Media	Down	Down





Original		Rechange	
	Title/Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/-		Shift +
			Guide / EPG / -/-

Original		Rechange	
	0		0
	Back		Back / Return
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title

