



Original	Recharge
Standby	Power
Source	AV / Input / RDS
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
P.Mode	Shift + Sleep / Timer
S.Mode	Shift + Audio / Lang I/II
Freeze	TV/Radio /
TXT	Setup / OPT /
Mix/FAV List	Fav / Marker / PC
Size	Sleep / Timer
Subtitle	Subtitle / EQ
Cancel/Audio	Audio / Lang I/II
Record	Rec / Rec Mode
<< / Index	>> / Tune+
>> / Hold	I<< / Preset-

Original	Recharge
I<< / Reveal	<< / Tune-
>>I / Subpage	>>I / Preset+
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up
Left	Left
Enter	OK
Right	Right
Play	Play / Slow
Pause/Timeshift	Pause / Step / Freeze
Down	Down
Stop	Stop / Hold
EPG	Guide / EPG / -/-
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-





	Original	Rechange
	Tv/Radio	Zoom / Size
	CH-	CH- / Page-
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	Display	Info / Angle
	0	0
	Recall	Back / Return

Original	Rechange

