








 

















 







	Original	Rechange	Original	Rechange
	Power			
	I<			
	>I			
	Vol+			
	Vol-			
	Stop			
	Play			
	Up			
	Down			
	Right			
	Left			
	Home			
	Pause			
	i			
	*			
	Mute	