



| Original | | Rechange | | Original | | Rechange | |
|----------|--------------|----------|--------------------|----------|-----------------|----------|-----------------------|
| | Power | | Power | | 0 | | 0 |
| | i | | Info / Angle | | Mute | | Mute / Dimmer |
| | Analog Menu | | Menu / Home | | Exit | | Exit / Cancel / Clear |
| | Digital Menu | | D.Menu / Top | | Vol+ | | Vol+ |
| | 1 | | 1 | | Up | | Up |
| | 2 | | 2 | | P+ | | CH+ / Page+ |
| | 3 | | 3 | | Left | | Left |
| | Input Select | | AV / Input / RDS | | Enter/CH List | | OK |
| | 4 | | 4 | | Enter/CH List | | Smart / List |
| | 5 | | 5 | | Right | | Right |
| | 6 | | 6 | | Vol- | | Vol- |
| | TV/DVB-T | | Display / Media | | Down | | Down |
| | 7 | | 7 | | P- | | CH- / Page- |
| | 8 | | 8 | | TV/Radio | | TV/Radio / |
| | 9 | | 9 | | [≡] | | Text / Goto |
| | Guide (EPG) | | Guide / EPG / -/-- | | [≡o] [≡o]/P<->P | | Back / Return |
| | Timer | | Sleep / Timer | | Picture Size | | Picture / Format |



