 


 

 


 


 



 

 




 
 



 

 

 






Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Back
 Menu	 Menu
 Exit	 Exit
 Tv/AV	 AV

Original	Rechange
 EPG	 Shift + Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 CH+	 Ch +
 CH-	 Ch -
 FAV+	 Shift + Ch +
 FAV-	 Shift + Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Sleep	 Sleep
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 FAV	 Pre Ch
 Display	 Info





Original		Rechange		Original		Rechange	
	P.Size		Format		Green		Green
	Nicam/A2		Options		Yellow		Yellow
	Tv/Radio		TV/R		Cyan		Blue
	Text		Text				
	Index		Smart				
	Subtitle		Subt				
	I<</Hold		I<<				
	Audio		Dual				
	>>I/Size		>>I				
	<</Subpage		<<				
	>>/Reveal		>>				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Rec/PVR		Rec				
	Media		Media				
	Red		Red				

