



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Tv/Radio	TV/Radio /
0	0
←PR	Back / Return
Menu	Menu / Home
Info	Info / Angle
Page Up	CH+ / Page+

Original	Rechange
Exit	Exit / Cancel / Clear
EPG	Guide / EPG / -/-
Page Down	CH- / Page-
Up/PR+	Up
Left	Left
Vol-	Vol-
OK/List	OK
Right	Right
Vol+	Vol+
FAV	Fav / Marker / PC
Down/PR-	Down
Pause	Pause / Step / Freeze
List	Smart / List
Tv/AV	AV / Input / RDS
UHF	Setup / OPT /
PAL/NTSC	Picture / Format
Audio	Audio / Lang I/II





	Original	Recharge	Original	Recharge
AUDIO	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 [...]	 Subtitle / EQ		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue/Audio L/R	 Blue / Prime Video / Random		
	 Blue/Audio L/R	 Sound / Title		

