



 











 














 



 






 



 





| Original | | Rechange | | Original | | Rechange | |
|---|-------------------|---|-----------------------------|---|-------|---|-----------------------|
|  | Power |  | Power |  | Menu |  | Menu / Home |
|  | Mute |  | Mute / Dimmer |  | Up |  | Up |
|  | Text / Play/Pause |  | Play / Slow |  | Left |  | Left |
|  | Text / Play/Pause |  | Pause / Step / Freeze |  | Enter |  | OK |
|  | Text / Play/Pause |  | Text / Goto |  | Right |  | Right |
|  | Still / Stop |  | Stop / Hold |  | Down |  | Down |
|  | Radio |  | TV/Radio / |  | Info |  | Info / Angle |
|  | Aspect / Size |  | Zoom / Size |  | Exit |  | Exit / Cancel / Clear |
|  | Red / << |  | << / Tune- |  | Vol + |  | Vol+ |
|  | Red / << |  | Red / Netflix / Search |  | Index |  | Display / Media |
|  | Green / >> |  | Green / APP / Repeat |  | CH + |  | CH+ / Page+ |
|  | Green / >> |  | >> / Tune+ |  | Vol - |  | Vol- |
|  | Yellow / I<< |  | Yellow / YouTube / Repeat |  | List |  | Smart / List |
|  | Yellow / I<< |  | I<< / Preset- |  | CH - |  | CH- / Page- |
|  | Blue / >>I |  | >>I / Preset+ |  | 1 |  | 1 |
|  | Blue / >>I |  | Blue / Prime Video / Random |  | 2 |  | 2 |
|  | Source |  | AV / Input / RDS |  | 3 |  | 3 |





| Original | Rechange |
|--------------|-------------------------------|
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Audio / I/II | Audio / Lang I/II |
| 0 | 0 |
| DVB | D.Menu / Top |
| FAV | Fav / Marker / PC |
| Sleep | Sleep / Timer |
| EPG | Guide / EPG / -/-- |
| Prev. CH. | Back / Return |
| Cancel | Shift + Exit / Cancel / Clear |
| Subtitle | Subtitle / EQ |
| USB | Shift + 8 |
| Rec | Rec / Rec Mode |

| Original | Rechange |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

