




 

 


 
 





 

 
 
 



 

 







 




 
 

 
 

 












 





 






Original	Rechange
 Power	 Power
 Source	 AV
 HDMI	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Rechange
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 CH List	 List
 Menu	 Menu
 Guide	 Guide
 Smart Hub	 Smart
 Tools	 Options
 Info	 Info
 Back/Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red





Original	Recharge	Original	Recharge
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Family Story	 Media		
 Search	 TV/R		
 P.Size	 Format		
 Support	 Eject		
 D	 3D		
 AD/Subt.	 Subt		
 <<<	 <<<		
 I<<<	 I<<<		
 Pause	 Pause		
 >>>	 >>>		
 >>>I	 >>>I		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

