







 



 



 



 







 



 

 

 



 


 






 


 










 







| Original | | Recharge | | Original | | Recharge | |
|---|-----------|---|------------------|---|----------|---|-----------------------|
|  | Power |  | Power |  | Vol + |  | Vol+ |
|  | Mute |  | Mute / Dimmer |  | MTS |  | Audio / Lang I/II |
|  | 1 |  | 1 |  | CH + |  | CH+ / Page+ |
|  | 2 |  | 2 |  | Vol - |  | Vol- |
|  | 3 |  | 3 |  | REC List |  | Smart / List |
|  | 4 |  | 4 |  | CH - |  | CH- / Page- |
|  | 5 |  | 5 |  | FAV List |  | Fav / Marker / PC |
|  | 6 |  | 6 |  | REC |  | Rec / Rec Mode |
|  | 7 |  | 7 |  | Freeze |  | Pause / Step / Freeze |
|  | 8 |  | 8 |  | Menu |  | Menu / Home |
|  | 9 |  | 9 |  | Up |  | Up |
|  | DTV / ATV |  | D.Menu / Top |  | Source |  | AV / Input / RDS |
|  | 0 |  | 0 |  | Left |  | Left |
|  | Recall |  | Back / Return |  | Enter |  | OK |
|  | P.Mode |  | Picture / Format |  | Right |  | Right |
|  | S.Mode |  | Sound / Title |  | Exit |  | Exit / Cancel / Clear |
|  | Sleep |  | Sleep / Timer |  | Down |  | Down |





| Original | | Recharge | | Original | | Recharge | |
|---|------------------------|---|-----------------------------|---|------|---|----------------|
|  | Display |  | Display / Media |  | Hold |  | Shift + Stop / |
|  | Red |  | Red / Netflix / Search |  | Text |  | Text / Goto |
|  | Green |  | Green / APP / Repeat | | | | |
|  | Yellow |  | Yellow / YouTube / Repeat | | | | |
|  | Blue |  | Blue / Prime Video / Random | | | | |
|  | << / Guide |  | << / Tune- | | | | |
|  | << / Guide |  | Guide / EPG / -/-- | | | | |
|  | Play/Pause / Timeshift |  | Play / Slow | | | | |
|  | >> / Aspect |  | >> / Tune+ | | | | |
|  | I<< / Cancel |  | I<< / Preset- | | | | |
|  | >>I / Subpage |  | >>I / Preset+ | | | | |
|  | Stop / Index |  | Info / Angle | | | | |
|  | Stop / Index |  | Stop / Hold | | | | |
|  | TV / Radio |  | TV/Radio / | | | | |
|  | Subtitle |  | Subtitle / EQ | | | | |
|  | Reveal |  | Setup / OPT / | | | | |
|  | Size |  | Zoom / Size | | | | |

