


 
 
 

 


 







Original	Rechange
 Power	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 I/II Audio	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 List	 List
 Recall	 Back
 TV Menu	 Menu
 Exit	 Exit
 Text	 Text
 Info / Display	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Enter	 Ok
 V -	 Vol -
 V +	 Vol +
 P -	 Ch -
 P +	 Ch +
 Red	 Red
 Green	 Green





Original	Recharge
 Yellow	 Yellow
 Blue	 Blue
 Subtitle	 Subt
 Hold	 Pause
 Size	 Format
 Reveal	 Options
 Mix	 Shift + Text
 Zoom / Index	 Eject
 FAV	 Pre Ch
 Subpage	 Shift + Subt
 TV / Radio	 TV/R
 EPG	 Guide

Original	Recharge

