

 












 



 






 


 




Original		Recharge		Original		Recharge	
	Power		Power		0		0
	Mute		Mute / Dimmer		Info		Info / Angle
	Rec		Rec / Rec Mode		<<		<< / Tune-
	TV Sys.		D.Menu / Top		Vol -		Vol-
	Browser		Display / Media		Vol +		Vol+
	Copy		Picture / Format		I<<		I<< / Preset-
	Music		Smart / List		>>		>> / Tune+
	1		1		Play / Pause		Play / Slow
	2		2		Play / Pause		Pause / Step / Freeze
	3		3		Stop		Stop / Hold
	4		4		>>I		>>I / Preset+
	5		5		Home		Shift + Menu /
	6		6		Up		Up
	7		7		Return		Back / Return
	8		8		Left		Left
	9		9		Enter		OK
	Repeat		Shift + Green / APP / Repeat		Right		Right





Original	Recharge	Original	Recharge
 Menu	 Menu / Home		
 Down	 Down		
 Setup	 Setup / OPT /		
 Time Shift	 Sleep / Timer		
 Slow I>	 Shift + Play /		
 A-B	 Shift + YouTube /		
 Goto	 Shift + Text /		
 Zoom	 Zoom / Size		
 Audio	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Angle	 Shift + Info / Angle		
 Red	 Red / Netflix / Search		
 Green / EPG	 Green / APP / Repeat		
 Green / EPG	 Guide / EPG / -/--		
 Yellow / Text	 Text / Goto		
 Yellow / Text	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

Original	Recharge	Original	Recharge

