




 


 




 













 


 














 



 

















 
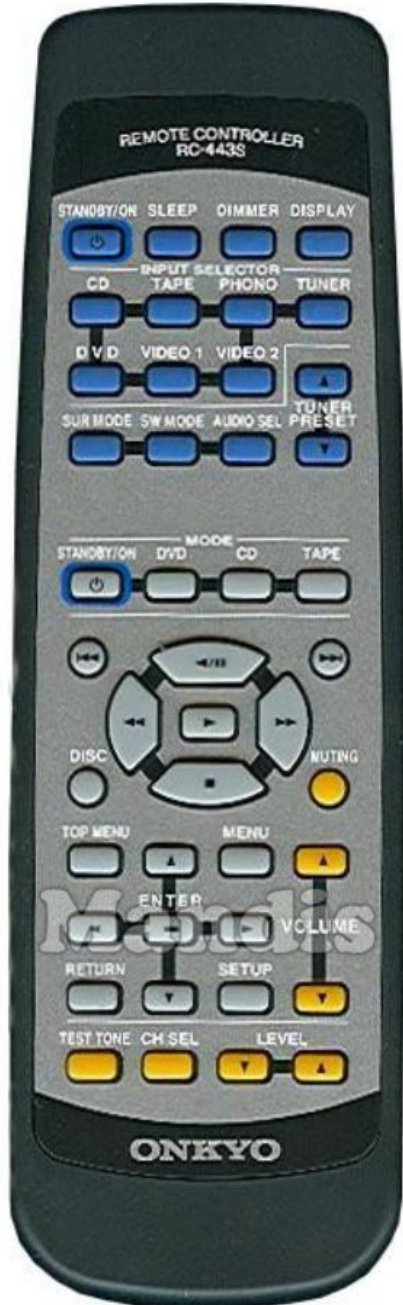 




Original		Rechange		Original		Rechange	
	Standby / On		Power		Play reverse / Pause		Pause
	Sleep		Sleep		>>		>>
	Dimmer		Blue		Stop		Stop
	Display		Info		<<		<<
	Input Sel. CD		1		Play		Play
	Input Sel. Tape		2		Muting		Mute
	Input Sel. Phono		3		Up		Up
	Input Sel. Tuner		4		Right		Right
	Input Sel. DVD		5		Down		Down
	Input Sel. Video 1		6		Left		Left
	Input Sel. Video 2		7		Enter		Ok
	SUR Mode		Subt		Volume +		Vol +
	Audio Sel		Dual		Volume -		Vol -
	Tuner + / Preset		Ch +		Return		Back
	Tuner - / Preset -		Ch -		Setup		Options
	I<<		I<<		Test Tone		Smart
	>>I		>>I		CH Sel		Media


 
 
 


 





Original	Rechange	Original	Rechange
 Power DVD	 Power	 Enter	 Ok
 I<<	 I<<	 Volume +	 Vol +
 >>I	 >>I	 Volume -	 Vol -
 Play Reverse / Pause	 Pause	 Return	 Back
 <<	 <<	 Setup	 Options
 Play	 Play		
 >>	 >>		
 Stop	 Stop		
 Disc	 Smart		
 Muting	 Mute		
 Top Menu	 Shift + Menu		
 Top Menu	 D. Menu		
 Menu	 Menu		
 Up	 Up		
 Right	 Right		
 Down	 Down		
 Left	 Left		





Original		Rechange		Original		Rechange	
	Play reverse / Pause		Pause				
	<<		<<				
	Play		Play				
	>>		>>				
	Stop		Stop				
	Muting		Mute				
	Volume +		Vol +				
	Volume -		Vol -				
	Left		Left				
	Enter		Ok				
	Right		Right				

