
 


 






















Original		Rechange		Original		Rechange	
	Power		Power		Repeat		Text
	Open / Close		Eject		Up / CH +		Up
	1		1		Up / CH +		Ch +
	2		2		Down / CH -		Down
	3		3		Down / CH -		Ch -
	4		4		Right / Seek +		Right
	5		5		Left / Seek -		Left
	6		6		Play / Pause		Ok
	7		7		Play / Pause		Play
	8		8		Play / Pause		Pause
	9		9		<<		<<
	0		0		>>		>>
	10+		Guide		Stop		Stop
	EQ		Smart		I<<		I<<
	Mute		Mute		>>I		>>I
	Prog		Sleep		Source		AV
	Random		D. Menu		CD / USB		Media





Original		Rechange		Original		Rechange	
	Bass		Options				
	Auto		Subt				
	Save		Format				
	Vol +		Vol +				
	Vol -		Vol -				
	Treble		3D				
	Intro		Info				
	ST / MO		Dual				

