

 









































 











 















Original		Rechange		Original		Rechange	
	Power		Power		Down		Down
	Mute		Mute / Dimmer		Quit		Back / Return
	Play / Pause		Play / Slow		Vol +		Vol+
	Stop		Stop / Hold		Liste		Smart / List
	Rec		Rec / Rec Mode		P +		CH+ / Page+
	<<		<< / Tune-		Vol -		Vol-
	>>		>> / Tune+		P -		CH- / Page-
	I<		I<< / Preset-		1		1
	>I		>>I / Preset+		2		2
	C		Subtitle / EQ		3		3
	Aspect		Picture / Format		4		4
	Menu		Menu / Home		5		5
	Up		Up		6		6
	Info		Info / Angle		7		7
	Left		Left		8		8
	OK		OK		9		9
	Right		Right		Guide		Guide / EPG / -/-



