


 


 









 

 

 

 





 





















 
































Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Red		Red / Netflix / Search		Up		Up
	Green		Green / APP / Repeat		Right		Right
	Yellow		Yellow / YouTube / Repeat		P +		CH+ / Page+
	Blue		Blue / Prime Video / Random		OK		OK
	<<		<< / Tune-		P -		CH- / Page-
	Play		Play / Slow		Down		Down
	>>		>> / Tune+		P < P		Smart / List
	<		<< / Preset-		Back		Back / Return
	Pause		Pause / Step / Freeze		Guide		Guide / EPG / -/--
	>		>> / Preset+		1		1
	Info		Info / Angle		2		2
	Stop		Stop / Hold		3		3
	Rec		Rec / Rec Mode		4		4
	Titles		Subtitle / EQ		5		5
	Exit		Exit / Cancel / Clear		6		6
	Menu		Menu / Home		7		7





	Original	Rechange		Original	Rechange
	 8	8			
	 9	9			
	 0	0			
	 PVR	 Display / Media			
	 Page Up	 + 	Shift + CH + /		
	 Page Down	 + 	Shift + CH - /		

