


 
 


 

 







 



 

 


 



 
 


 


 
 


 
 
 



 











 



 



 


 




 

 

 

 

 



 
 


 

 

 




Original	Rechange	Original	Rechange
 Standby	 Power	 Auto	 Media
 Mute	 Mute	 Display	 Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 LCD Menu	 Menu
 4	 4	 Exit	 Exit
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 Enter	 Ok
 0	 0	 Input	 AV
 -/--	 Shift + Guide	 P.Mode	 Shift + Format
 Recall	 Back	 S.Mode	 Shift + Dual
 Vol+	 Vol +	 Sleep	 Sleep
 Vol-	 Vol -	 Aspect	 3D
 Nicam	 Smart	 FAV	 Pre Ch

Original	Rechange	Original	Rechange
 Standby	 Power	 Auto	 Media
 Mute	 Mute	 Display	 Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 LCD Menu	 Menu
 4	 4	 Exit	 Exit
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 Enter	 Ok
 0	 0	 Input	 AV
 -/--	 Shift + Guide	 P.Mode	 Shift + Format
 Recall	 Back	 S.Mode	 Shift + Dual
 Vol+	 Vol +	 Sleep	 Sleep
 Vol-	 Vol -	 Aspect	 3D
 Nicam	 Smart	 FAV	 Pre Ch





	Original	Recharge	
	FAV-	 Shift + Ch -	
	FAV+	 Shift + Ch +	
	Text	 Text	
	Hold	 Options	
	Lang	 Dual	
	EPG	 Guide	
	Index	 List	
	Size	 Format	
	Reveal	 Subt	
	Subpage	 TV/R	
	Red/Tv/Radio	 Red	
	Green/Audio	 Green	
	Yellow/Freeze	 Yellow	
	Blue/Subtitle	 Blue	

Original	Recharge

