



 











 
 
 


 





 
 
 

 





	Original	Recharge	Original	Recharge
	Power			Eject
	Home			Eject
	Up			
	Down			
	Right			
	Left			
	Enter			
	Back			
	Option			
	Stop			
	Pause			
	Play			
	<<			
	>>			
	>>I/Next			
	I<</Prev			
	Search	