



 



 



 

 

 

 

















 





 

 



 

 

 

 

 















Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/-		Red / <<		<< / Tune-





Original	Recharge	Original	Recharge
 Green / >>	 >> / Tune+		
 Green / >>	 Green / APP / Repeat		
 Yellow / I<<	 I<< / Preset-		
 Yellow / I<<	 Yellow / YouTube / Repeat		
 Blue / >>	 Blue / Prime Video / Random		
 Blue / >>	 >> / Preset+		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Pause / Step / Freeze		
 Text / Play/Pause	 Play / Slow		
 Stop / Still	 Stop / Hold		
 Timer / Subtitle	 Subtitle / EQ		
 Size / Aspect	 Zoom / Size		
 Cancel [≡X]	 Shift + Exit / Cancel / Clear		
 Radio	 TV/Radio /		
 Audio / I/II	 Audio / Lang I/II		
 Rec	 Rec / Rec Mode		





Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





Original	Recharge	Original	Recharge
	Green 		Green / APP / Repeat
	>> 		>> / Tune+
	Yellow 		Yellow / YouTube / Repeat
	I<< 		I<< / Preset-
	Blue 		Blue / Prime Video / Random
	>> 		>> / Preset+
	Play 		Play / Slow
	Pause 		Pause / Step / Freeze
	[≡] 		Text / Goto
	Stop/Still 		Stop / Hold
	[≡+] 		Picture / Format
	[≡o]/Subtitle 		Subtitle / EQ
	[≡◆]/[+] 		Zoom / Size
	[≡x] 		Setup / OPT /
	Radio 		TV/Radio /
	Audio 		Audio / Lang I/II
	Rec 		Rec / Rec Mode

