





 

 













 















Original	Rechange
 Power	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 10+	 Shift + Guide / EPG / -/-
 9	 9
 0	 0
 Display	 Display / Media
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Prog/EPG	 Guide / EPG / -/-

Original	Rechange
 Prog/EPG	 Shift + TV/Radio / Program
 Title/TTX	 Text / Goto
 Title/TTX	 Sound / Title
 Vol+	 Vol+
 Goto	 Shift + Text /
 PBC	 Picture / Format
 Vol-	 Vol-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Setup	 Setup / OPT /
 Return	 Back / Return
 Source	 AV / Input / RDS
 Tv/Radio	 TV/Radio /
 Up	 Up
 Down	 Down
 Enter	 OK





	Original	Recharge
	<<	<< / Tune-
	Right/FAV+	Right
	>>	>> / Tune+
	I<<	I<< / Preset-
	Left/FAV-	Left
	>>I	>>I / Preset+
	3D	+ 3 Shift + 3
	Subtitle	Subtitle / EQ
	Zoom	Zoom / Size
	Mode	Smart / List
	Digest	Fav / Marker / PC
	Language	Audio / Lang I/II
	P/N	Sleep / Timer
	Repeat	Green / APP / Repeat
	L/R	D.Menu / Top
	A-B	Yellow / YouTube / Repeat
	Angle	Info / Angle

	Original	Recharge
	Slow	+ Shift + Play /

