 










 






 










Original	Recharge
 Power	 Power
 V-Mode	 D.Menu / Top
 Mute	 Mute / Dimmer
 SAT	 Shift + 0
 SAT	 Display / Media
 TV / AV	 AV / Input / RDS
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 FAV	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 Pause	 Pause / Step / Freeze
 7	 7

Original	Recharge
 8	 8
 9	 9
 Page +	 Shift + CH+ /
 TV / Radio	 TV/Radio /
 0	 0
 <-- PR	 Back / Return
 Page -	 Shift + CH- /
 Up / PR +	 CH+ / Page+
 Up / PR +	 Up
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK / List	 Smart / List
 OK / List	 OK
 Right / Vol +	 Right
 Right / Vol +	 Vol+
 Down / PR -	 CH- / Page-
 Down / PR -	 Down





Original	Recharge
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Info	Info / Angle
EPG	Guide / EPG / -/--
Red / Find	Red / Netflix / Search
Green / V-Format	Picture / Format
Green / V-Format	Green / APP / Repeat
Yellow / TXT	Text / Goto
Yellow / TXT	Yellow / YouTube / Repeat
Blue / Audio	Audio / Lang I/II
Blue / Audio	Blue / Prime Video / Random
Record	Rec / Rec Mode
Play	Play / Slow
Stop	Stop / Hold
Shift	Setup / OPT /
<< Fast	<< / Tune-
>> Fast	>> / Tune+

Original	Recharge
< Slow	I<< / Preset-
> Slow	>>I / Preset+

