





 

 

























Original	Recharge
 Power	 Power
 DVD	 Shift + 2
 VCR	 Shift + 4
 Title / PBC	 Sound / Title
 Menu	 Menu / Home
 Display	 Display / Media
 Open / Close	 Eject / Surround
 Up / PR +	 CH+ / Page+
 Up / PR +	 Up
 Output	 AV / Input / RDS
 Left	 Left
 Setup / Enter	 OK
 Setup / Enter	 Setup / OPT /
 Right	 Right
 Return / OK	 Back / Return
 Down / PR -	 CH- / Page-
 Down / PR -	 Down

Original	Recharge
 Clear / 3D	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 Zoom	 Zoom / Size
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 I<< Prev	 I<< / Preset-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Next >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Program	 TV/Radio /
 CLK / CNT	 Text / Goto
 Mark	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Rec	 Rec / Rec Mode





	Original	Rechange
	Speed / Angle	 Info / Angle
	TV / VCR	 Smart / List
	1 / Tracking -	 1
	1 / Tracking -	 Vol-
	2	 2
	3 / Tracking +	 3
	3 / Tracking +	 Vol+
	4	 4
	5	 5
	6	 6
	System	 D.Menu / Top
	7	 7
	8	 8
	9	 9
	0	 0

	Original	Rechange

