



Original	Recharge
Power	Power
(*)	Subt
[≡]	Text
O	TV/R
[+]/◆	Info
?	Options
I-II/[≡i]	Dual
16:9/+	Format
(<>)/X	Exit
Inst	Smart
Input	AV
P<P	Pre Ch
P+	Ch +
P-	Ch -
Up	Up
Down	Down
Right	Right

Original	Recharge
Left	Left
Vol+	Vol +
Vol-	Vol -
Menu	Menu
Red/Picture	Red
Green/Audio	Green
Yellow/Timer	Yellow
Blue/Headphon	Blue
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9





Original		Rechange		Original		Rechange	
0	0	0	0				
PP	PP	RETURN BACK	Back				
	Mute	MUTE	Mute				

