 







 

 

 

 

 


 




 



 









 




Original	Recharge
 On	 Power
 Off	 Shift + Power
 CD	 3
 MP	 8
 Tuner	 6
 Discphono	 1
 Tape 1	 2
 Tape 2	 5
 AUX	 7
 Video	 4
 Info	 Info / Angle
 Sleep	 Sleep / Timer
 Scan Tune >>	 >> / Tune+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 << Scan Tune	 << / Tune-
 DIM	 Shift + Mute / Dimmer

Original	Recharge
 Vol-	 Vol-
 SPK A/CD	 CH+ / Page+
 Up	 Up
 SPK B/USB	 CH- / Page-
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Tone DFT/OPT	 Setup / OPT /
 I<< Preset	 I<< / Preset-
 Play/AM/FM/DB	 Play / Slow
 Preset >>I	 >>I / Preset+
 Red/Rand/Tuner	 Red / Netflix / Search
 Green/RPT/Blen	 Green / APP / Repeat
 Yellow/Prog/Memo	 Yellow / YouTube / Repeat
 Blue/Clear/Delete	 Blue / Prime Video / Random




 


Original	Recharge	Original	Recharge
 On	 Power	 <<	 << / Tune-
 Off	 Shift + Power	 DIM	 Shift + Mute / Dimmer
 1	 1	 Vol-	 Vol-
 2	 2	 SPK A/ CD	 CH+ / Page+
 3	 3	 Up	 Up
 4	 4	 SPK B/USB	 CH- / Page-
 5	 5	 Left	 Left
 6	 6	 Enter	 OK
 7	 7	 Right	 Right
 8	 8	 Menu/SRC	 D.Menu / Top
 9	 9	 Down	 Down
 Disp	 Display / Media	 Tone DFT/OPT	 Setup / OPT /
 0	 0	 Open/Close/Autot	 Eject / Surround
 +10	 Guide / EPG / -/-	 Stop	 Stop / Hold
 >>	 >> / Tune+	 Pause	 Pause / Step / Freeze
 Mute	 Mute / Dimmer	 I<<	 I<< / Preset-
 Vol+	 Vol+	 Play	 Play / Slow





Original	Rechange
 On	 Power
 Off	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Disp/Info	 Info / Angle
 0	 0
 Tune Scan >>	 >> / Tune+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 << Scan Tune	 << / Tune-

Original	Rechange
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 I<< Preset	 I<< / Preset-
 Play/AM/FM/DB	 Play / Slow
 Preset >>I	 >>I / Preset+
 Red/Rand/Tuner	 Red / Netflix / Search
 Green/RPT/Blen	 Green / APP / Repeat
 Yellow/Prog/Memo	 Yellow / YouTube / Repeat
 Blue/Clear/Delete	 Blue / Prime Video / Random

