








 









 



 











 



 



 





 

 


 


 








 





Original		Rechange		Original		Rechange	
	TV		TV/R		Yellow		Yellow
	Video		Smart		Blue		Blue
	PC		Media		1		1
	Text		Text		2		2
	P+		Ch +		3		3
	Up		Up		4		4
	P-		Ch -		5		5
	Down		Down		6		6
	Right		Right		7		7
	Vol+		Vol +		8		8
	Left		Left		9		9
	Vol-		Vol -		0		0
	Menu		Menu		-/--		Guide
	Menu		Ok		L / ?		List
	Mute		Mute		Freeze		Pause
	Red / M		Red		M/S		Options
	Green		Green		PIP		3D





Original	Rechange
Auto	Back
F[+]	Format
i	Info
F1	Shift + 1
Clock	AV
F2	Shift + 2
F3	Shift + 3
F4	Shift + 4
Power	Power

Original	Rechange

